

Guarantee registration

Appliance model

Serial no.

Date of purchase

Customer name

Address

Please help us to further improve our products by ticking the one main reason for purchase

Price

Styling/Appearance

Features

Previous Burco ownership

Dealer recommendation

Service back-up

Other (please state)

Where did you buy your Burco appliance ?

Dealer/Retailer

If you do not want Burco to keep you informed of future products and offers, please tick here

CUT HERE & DETACH

Trouble shooting

If you have any difficulty with your appliance, please consult list below before contacting the Burco customer helpline:

ISSUE: Toaster is connected to the mains but has no power going into the unit.

CHECK: Is the green power indicator on? If not try using another power supply. Check power supply is switched on and the right hand dial is not switched to off.

ISSUE: The conveyor belt is moving but the toaster is not toasting?

CHECK: Has left hand dial been set to 'econ' ie half power mode.

ISSUE: Unit is switched on but conveyor belt is not moving or moving very slowly.

CHECK: Has the right hand dial been set to OFF?

CHECK: Has debris become lodged inside the unit stopping the conveyor belt moving round. If debris is stopping your toaster working Turn OFF at the power mains and allow to cool before removing debris.

ISSUE: Has left hand dial set to very dark/slow?

CHECK: Use right hand dial to select a lighter shade of toast and increase conveyor belt speed.

ISSUE: Conveyor belt toaster keeps burning toast.

CHECK: Use right hand dial to select a lighter shade of toast and increase conveyor belt speed.

ISSUE: Toaster will not eject from rear.

CHECK: Is rear hatch open?

If the guide above does not help you solve the problem you have with your toaster please contact our helpline on **0871 222 2620**

Burco products are intended for commercial use only as detailed in these instructions.

Burco has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

BURCO


Conveyor belt toaster



Please read and keep these instructions

Model 77010
SKU 444448554

Dimensions
H 390mm,
W 365mm,
D 575mm

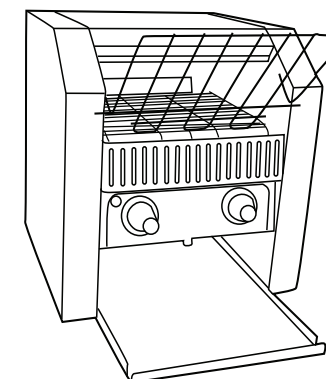

Getting the best from your toaster.....

- Remove any plastic film from the product before use
- The conveyor belt toaster must be placed on a level, firm place.
- If you are having difficulty using your toaster please refer to the trouble shooting guide at the back on the instruction book.



Burco Commercial Catering Equipment

Glen Dimplex Professional Appliances
Stoney Lane, Prescot, Merseyside, L35 2XW
Tel 0871 222 5118 Fax 0871 222 9636
Email info@gdpa.co.uk

BURCO

CP77010MUK Rev 2 10/08

CE www.burco.co.uk

Important safety instructions

The use of any electrical appliance requires following common sense safety rules.

Primarily there is danger of personal injury and secondly danger of damage to the appliance and property. These are indicated in the instructions text by the following two conventions:

WARNING: Danger of personal injury

IMPORTANT: Damage to the appliance

In addition we offer the following essential safety advice.

Location

- Always ensure that your conveyor belt toaster is sat level on a firm, flat surface.
- Ensure your toaster is sat far enough back from the front of the work surface not to hang over the edge and cause an obstruction.
- Do not use your conveyor belt toaster outside.

IMPORTANT: Do not locate the toaster in areas subject to excess temperatures or grease from cooking appliances such as fryers, as exposure to these elements may cause damage to the unit. Do not place toaster in an area which restricts air flow around the front or rear of the unit. Do not place the toaster in direct discharge path or air-conditioning vent or make-up air vent.

Personal safety

- **WARNING: Extreme caution must be used when moving the toaster as it is very heavy.**
- **WARNING: The exterior surfaces of the toaster will get very hot whilst in operation. Use caution when touching these surfaces**

- Always turn the toaster off, allow to cool down and unplug before adjusting, moving or cleaning the unit.

Mains cord

- The mains lead should reach from the socket to the toaster without straining the connections.
- Do not let the cord hang over the edge of the table or the counter and keep it away from any hot surfaces.
- Do not place the toaster where the mains lead could fall into a sink.

Other safety considerations

- To protect against fire, electric shock and personal injury do not immerse cord, plug or toaster in water or any other liquid.
- The use of attachments or tools not recommended or sold by Burco Appliances may cause fire, electric shock or injury.
- If the mains lead is damaged, it should be replaced, by a qualified technician.
- Unplug from the mains outlet when not in use and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

NOTE: You will not need to use lubrication on your toaster. This appliance is not to be cleaned using a water jet.

Replacement parts

IMPORTANT: This product has no user serviceable parts.

Genuine replacement Burco parts must only be fitted by a qualified service engineer. If generic non-Burco parts are fitted you may stop your toaster operating safely and in the most efficient manner.

Helpline

If you have trouble with your toaster please consult our Trouble shooting guide on the back of this instruction book. If after consulting this and you are still having trouble please do not hesitate to call us. Please have your product to hand and have the following information ready to enable us to deal with your query quickly:

- Name of the product.
- Model number as shown on rating plate, located on the back of the unit.
- Serial number as located on rating plate, located on the back of the unit.

Guarantee

This conveyor belt toaster is guaranteed for a period of 12 months from the date of purchase against defective materials or faulty workmanship.

This guarantee is given subject to the unit being used in accordance with the instructions of the supply voltage marked on it and to the usual fair wear and tear conditions.

The guarantee does not cover consequential damage arising out of any failure acceptable under guarantee, nor does it cover damage resulting from misuse, accident or unauthorised alterations to the unit.

Proof of purchase will be required.

In any communication with the manufacturer, it is essential to quote the model and serial number marked on the rating plate.

This guarantee, in no way diminishes the buyer's statutory rights.

Please fill in and return the tear off section to register the guarantee with Burco.



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

CUT HERE & DETACH

Marketing Department
Burco Appliances Ltd
Talbot Road
Mexborough
South Yorkshire
S64 8AJ

Affix
postage stamp
here

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your electricity supply which must be A.C. (Alternating Current).

If the socket outlets are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.


WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

WARNING: This appliance must be earthed.

Should the fuse in the 13A plug require changing, a 13A BS 1362 fuse must be fitted.

Features

- 1 Bread feed chute
- 2 Crumb tray
- 3 Element selection dial (for single or double sided toasting)
- 4 Front toast eject chute.
- 5 Shade selection / speed control
- 6 Power on indicator
- 7 Control panel cover
- 8 Control panel cover security nut.
- Back**
- 9 Rear toast eject chute

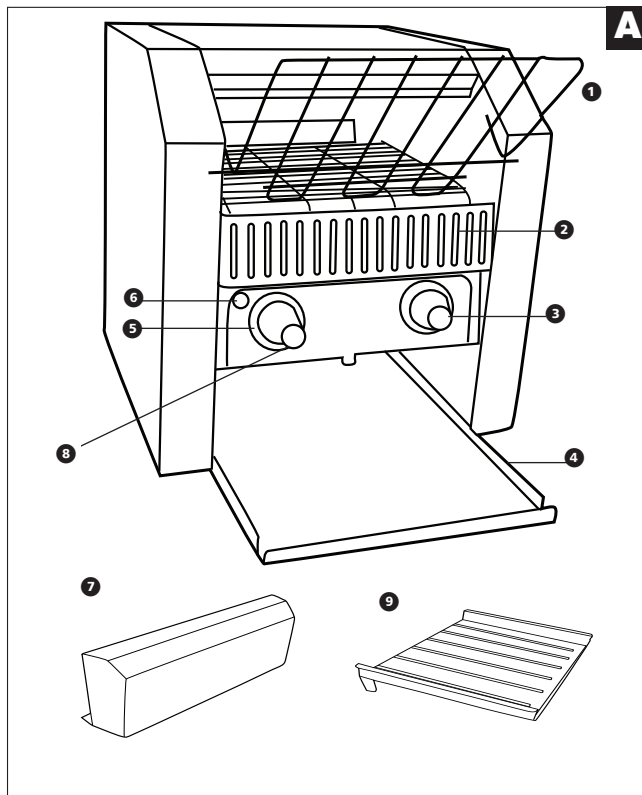


3

Assembling your toaster

Crumb tray

WARNING: Ensure your toaster is disconnected at the main power supply and has cooled down before attaching or removing the crumb tray.

- 1 To attach the crumb tray insert on top of the rail on of the toasting tray.
- 2 Push all the way in until the tray reaches the back and the front of the tray sits flush with the front of the unit.

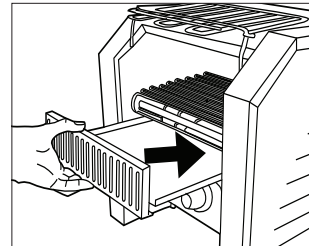

IMPORTANT: To avoid debris entering the unit and causing damage always operate the toaster with crumb tray installed.

Eject chute

Your toaster can be set up to use either the front or rear toast eject chute, however they can not be used together. When using the rear eject chute the rear hatch must be pushed inward to open and clicked into place before use.


For front eject the rear hatch must be in the vertical/closed position.

4

Front toast eject chute

WARNING: Ensure your toaster is disconnected at the main power supply and it has cooled down before attaching or removing the front toast eject chute.

- Attach the chute by pushing the curved end with hooked lip to the back of the unit.

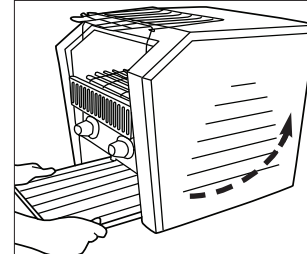


- Adjust until the hooked lip is fixed over the screws on the inside of the toaster at the rear end.


Rear toast eject chute

WARNING: Ensure your toaster is disconnected at the main power supply and has cooled down before attaching or removing the rear toast eject chute.

- Push rear hatch inward to open and click into place.

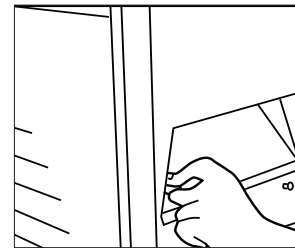

- Attach the eject chute by hooking the two cut outs on the side of the chute over the two screws on the back of the toaster.

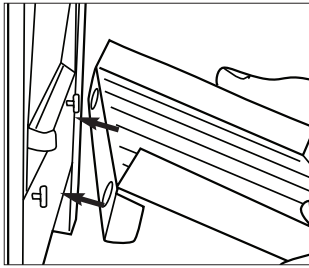


- Once located over the screws push the eject chute down firmly to ensure it is locked in place.

Bread feed chute

WARNING: Ensure your toaster is disconnected at the mains power supply and has cooled down before adjusting the bread feed chute.

Bread feed chute is designed to enable toast to be automatically feed into the toaster. Using the bread feed chute will ensure the most efficient and even toasting possible is achieved.

- The bread feed chute will already be attached to your toaster.
- To use, ensure that the chute is protruding from the front of the toaster.
- Whilst not in use or for storage the toast feed chute can be rotated back and stored on the top of your toaster.

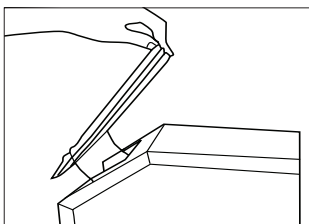

Toasting

Products for toasting when placed on the conveyor belt pass through the cooking area which has elements both above and below. Items of different thickness, sizes, moisture and sugar content will toast at different speeds.

5

However, the main derminant of the final result is the conveyor speed which can be adjusted using the selection dial.

IMPORTANT: The toasting of coated or buttered products such as cheese sandwiches or garlic bread is not recommended. Any residue from these items if deposited inside the toaster could ignite or inhibit the performance of your toaster.

Use

IMPORTANT: On first use ensure all packaging and holding tapes are removed from the unit.

- Plug the unit into a properly grounded electricity supply.
- Suggested the unit is allowed to heat up fully on the initial operation as it is likely to give off a new smell initially.

Warm up / single or double sided toast

- Select single or double sided toasting.
- The dial on the right of the control panel (element selection dial) allows you to select whether you require:



Single sided toasting (top element only active)



Double sided toasting (both elements active)

- The green power indicator will illuminate and will remain illuminated whilst there is power to the unit.


IMPORTANT: It is recommended that 20 minutes is allowed for your toaster to warm up before use for economy mode.

Make toasting and shade selection


- The dial on the left of the control panel (shade selection /speed control) allows you to select the

shade of toasting required (this is achieved by adjusting the speed of the conveyor belt.)

- To change the shade of toasting you require select from the following:

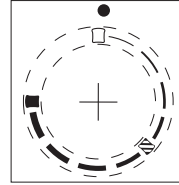

- Tip: It is suggested that to achieve desired level of toasting the toaster should be set to "Medium toasting" on first use. Insert a piece of toast to test level, when this is dispensed adjust controls accordingly to achieve desired result. The control cover panel can then be attached to prevent changing of settings (see below)
- During use the shade selection and element selection dials can be adjusted as required.

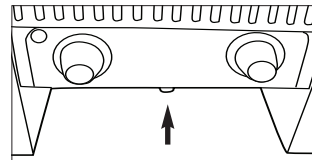


Additional features

Control panel cover

WARNING: Ensure your toaster has cooled down before attaching or removing control panel cover.

- Ensure the fixture beneath of the control panel cover is extended.
- Place control panel cover over the control panel.
- Push against unit and turn fixture anti-clockwise until the cover is secure.


6

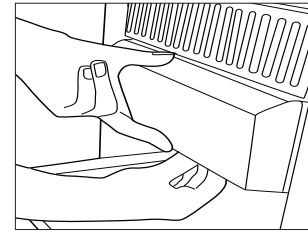

Economy mode

This feature allows the toaster to be put into standby mode, which reduces the power economy mode by 50%.

- To activate select the 'Econ' on the using the element selection dial on the right of the control panel.
- To revert back to full operation

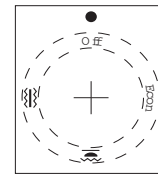

select single or double sided toasting as above. Allow a minimum of 2-3 minutes before toasting: the unit will be back up to full temperature within 10 minutes.

Cleaning

WARNING: Always disconnect the plug from the mains and allow to cool before cleaning.

- Remove crumb tray and chutes to clean. These items are both dishwasher safe, or they can be cleaned using a cloth and small amount of non-abrasive cleaner.
- Wipe the outside of your toaster with damp cloth. It is recommended that this is done daily. Stubborn stains may be removed using a good stainless steel cleaner or non-abrasive cleaner.
- Hard to reach areas should be cleaned using a small bristle brush and mild cleaner.

IMPORTANT: Do not use abrasive cleaners on the toaster as this could scratch the finish of your toaster.